



QIG Controlling the Niveo NUPS22-series

There are 2 ways for controlling/monitoring the UPS:

1. With SNMP card:
Please install "ViewPower Pro" software to remote control it.
2. Without SNMP card :
Please use the USB or RS-232 cable connect with PC and UPS. Install "ViewPower" software to monitor your UPS.

The monitor software will auto link the UPS and show the UPS information.

To download the software:

Do you use SNMP card in your UPS?

If yes, go to <http://www.power-software-download.com/viewpowerpro.html>

If not, go to <http://www.power-software-download.com/viewpower.html>

For the complete UPS Communication Protocol, please check the document: Niveo Professional UPS Communication Protocol, OID table and MIB file.