
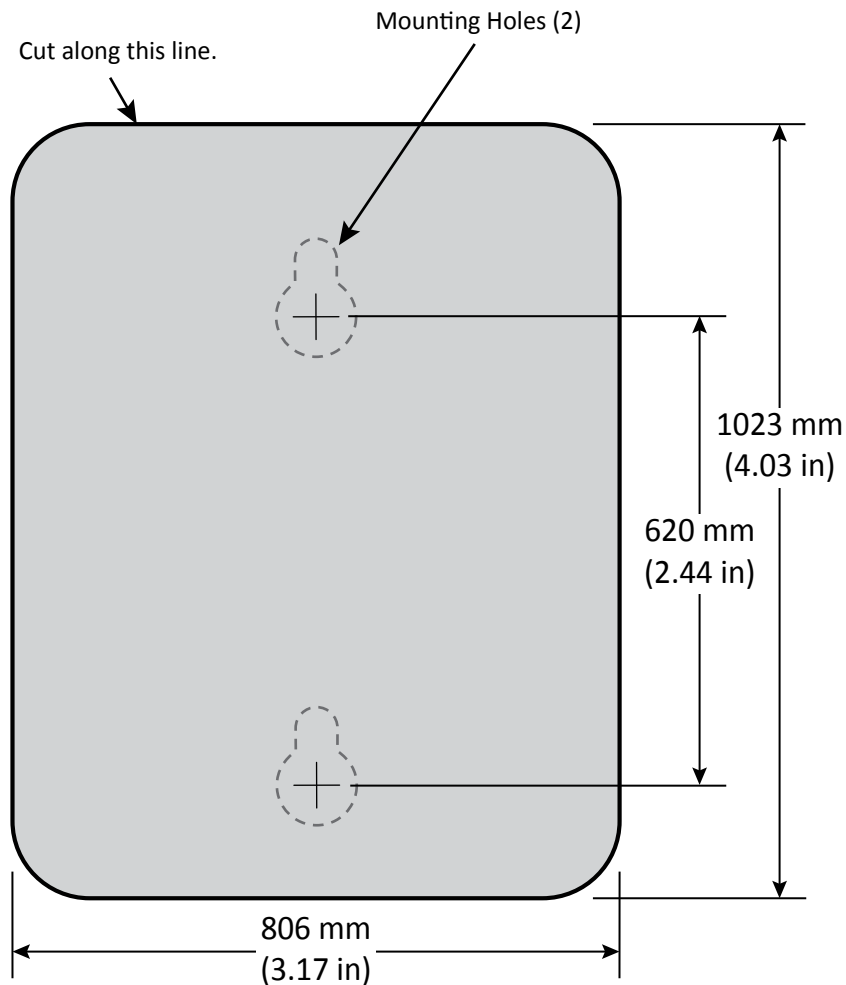


Please print this document at actual size (1:1) to ensure the mounting screws line up correctly with the mounting holes.

### SKYPLAY-DFS-S Wall Mounting

Use the template below to mount the SKYPLAY-DFS-S to a wall. Use #10 pan head screws that are long enough to secure the transmitter to the wall while also providing proper clearance to reach the mounting holes.

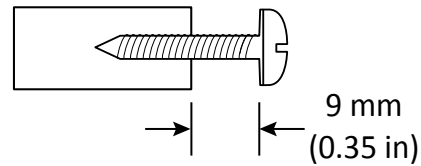

### SKYPLAY-DFS-R Wall Mounting

Use the template below to mount the SKYPLAY-DFS-R to a wall. Use #8 pan head screws that are long enough to secure the receiver to the wall while also providing proper clearance to reach the mounting holes.

