


## IPEXAR Hardware Controller Specifications

The Liberty AV Arranger controller is a purpose built Linux server appliance provisioned specifically for controlling and managing DigitalinxiP video endpoints on a Network. It is designed with an auto on feature so device powers immediately when power is applied or cycled so server application is always running. The IPEXAR requires a hardwired Ethernet connection to the DigitalinxiP AV LAN for system control. The default IP address for the IPEXAR is 169.254.1.1/16. The Arranger Controller API can be accessed on TCP port 6980.

The IPEXAR has three provisioned parts numbers: *IPEXAR-2100*; supports DigitalinxiP 2100 series, *IPEXAR-5000*; supports DigitalinxiP 5000 series and *IPEXAR-6000* which supports DigitalinxiP 6000 series devices.

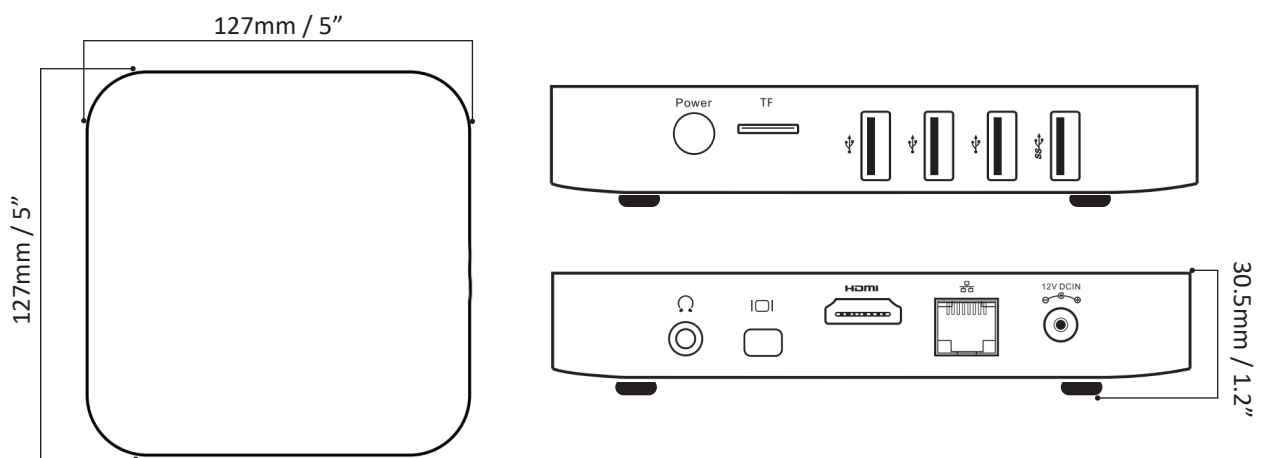

<b>Processor</b>	Intel X5-Z8350 64 bit
<b>GPU</b>	Intel HD Graphics
<b>Memory</b>	4GB DDR3L
<b>Internal Storage</b>	64GB eMMC 5.1
<b>Operating System</b>	Debian 10
<b>Video Output</b>	HDMI 1.4 , Mini Display Port
<b>3.5 Audio Input</b>	Not applied or used in OS
<b>Peripheral Interface</b>	RJ-45 Gigabit Ethernet, Micro SD Card Reader USB2. port x3, USB 3.1 port x1, Kensington lock ready
<b>Power</b>	DC 12V, 3A adapter with EU and US power adapters (CE, FCC certified)
<b>Dimensions</b>	5" x 5" x 0.75" Height (1.2" includes Rubber feet)
<b>Weight</b>	0.95 lbs
<b>Included Accessories</b>	HDMI Cable, PC wall mount
<b>Warranty</b>	1 Year