

Getting Started

5000/5100 Series DigiIP AVoIP and Arranger Controller Installation

**While 5000 & 5100 Series share documentation, please be aware they are not compatible within the same system. Please deploy all 5000 or all 5100 series products for proper functionality.

Step 1 - Configure a Network Switch for AV Multicasting

- [VIDEO](#) - Network Switch Requirements
- [DOCUMENT](#) - Network Switch Settings and Approved Switch List
- [DOCUMENT](#) - Switch Manufacturer Startup / Running Config Settings

Step 2 - Connect all Digi IP Devices to the AV Network Switch

- [VIDEO](#) – Network Cabling Requirements
- [DEVICE MANUAL](#) – DigiIP 5000 Series
- [DEVICE MANUAL](#) – DigiIP 5100 Series

Step 3 - Connect all AV devices to the Digi IP encoders and decoders

- Connect HDMI AV Sources to the **IPEX5001/5101** Encoders
- Connect TV Displays and Monitors to the **IPEX5002/5102** Decoders

Step 4 - Connect the IPEXAR-5000 / IPEXAR-5100 Arranger Controller to the AV Network Switch and Login

- [VIDEO](#) – Connecting to the Arranger Controller

Once connected to the Arranger controller web server, Digi IP device and system configuration is managed entirely in Arranger

- [SOFTWARE MANUAL](#) – Can also be accessed once logged into Arranger
- [API](#) – Can also be accessed once logged into Arranger

Click [HERE](#) for more Arranger Training Videos Online

Note: You must have a LibAV website login to access the *AVOIP* training video category online, contact your LibAV sales rep for access

Need more training? [Contact us!](#)